



F. Atlee Dodge Aircraft Services, Inc.

P. O. BOX 190409 - ANCHORAGE, ALASKA 99519-0409

PHONE (907) 344-1755 - FAX (907) 344-6720

32381

7/20/95


Sheet 2 of 2

INSTALLATION OF TAIL PIPE DEFLECTOR FOR CESSNA 206

PURPOSE: DIRECT THE EXHAUST GASES AWAY FROM THE AIRCRAFT BELLY.
THIS WILL HELP IN PREVENTING CORROSION AND BUILD-UP OF
SOOT.

INSTALLATION INSTRUCTIONS

1. The aircraft exhaust system must have the Cessna tail pipe Part Number 1242013-1 LH and 1242013-2 RH.
2. Slide the deflector tube over the tail pipe. Turn deflector in the direction to deflect the exhaust away from the aircraft.
3. Suggest that the deflector be temporarily installed using a hose clamp AN737TM74 or equivalent.
4. Run the engine and make any adjustments necessary to the deflector.
5. Remove the AN737TM74 clamp.
6. Temporarily install the clamp supplied. To position clamp in the proper position, mark location of the pin, remove the clamp.
7. Drill a 3/16" (#11 drill) hole through both the deflector and the tail pipe. Install the clamp. Tighten so that deflector is secure.
8. Make log book entry and fill out FAA Form 337.
9. W & B 13.5 oz. per deflector at STA 4.5.

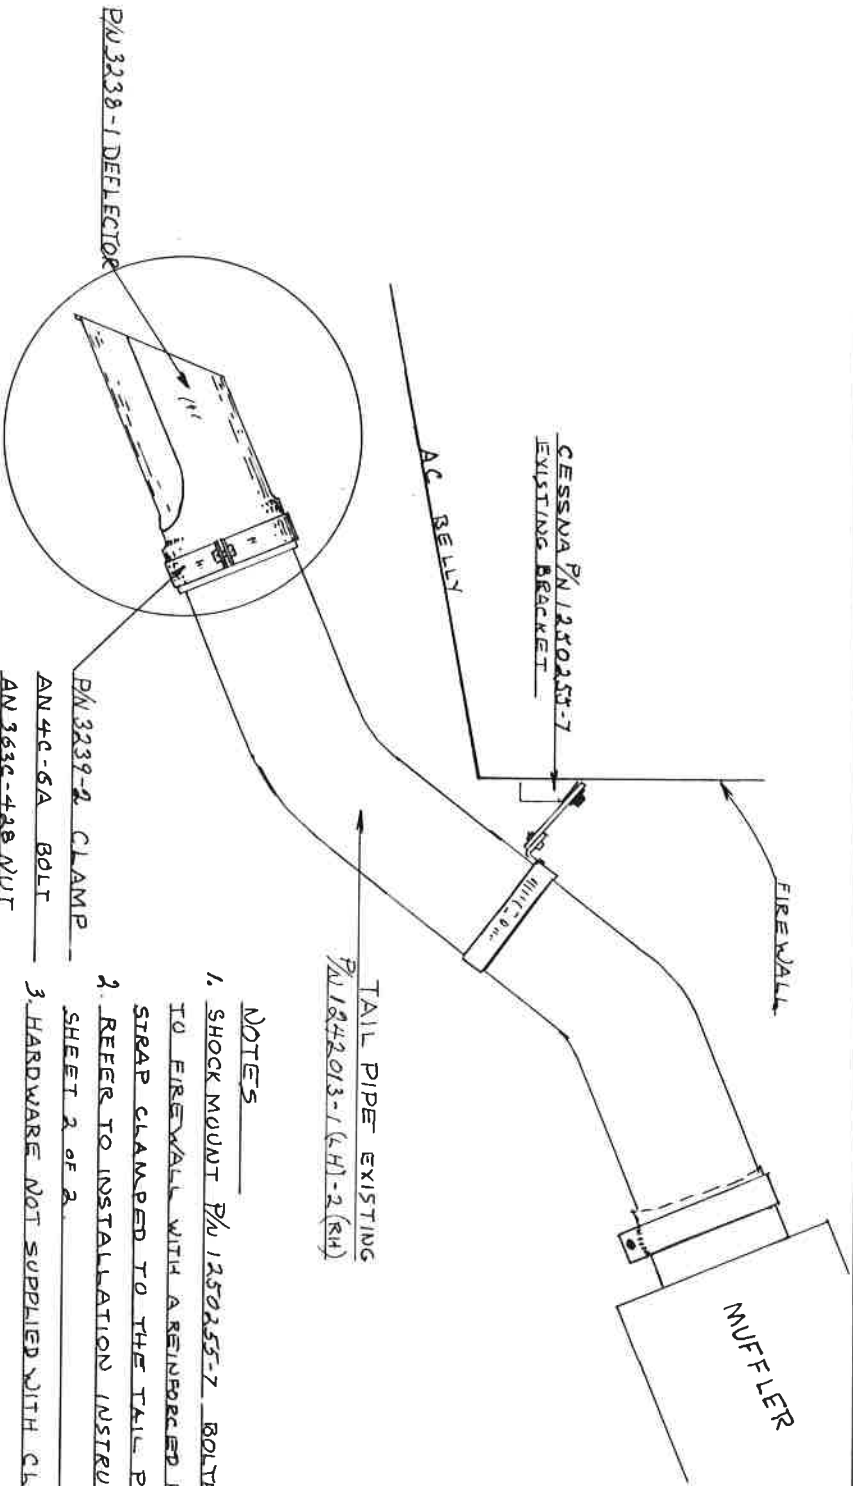


TAIL PIPE EXISTING
P/N 1242013-1 (4H)-2 (RH)

NOTES

1. SHOCK MOUNT P/N 1250255-7 BOLTED TO FIREWALL WITH A REINFORCED RUBBER STRAP CLAMPED TO THE TAIL PIPE.
2. REFER TO INSTALLATION INSTRUCTIONS SHEET 2 OF 2.
3. HARDWARE NOT SUPPLIED WITH CLAMP.

QTY	P/N	DESCRIPTION
1	3239-2	CLAMP
1	3238-1	DEFLECTOR

DEFLECTOR KIT

 F. ATLEE DODGE P.O. BOX 190469 ANCHORAGE, AK 99519 (907) 344-1755	AC AFFECTED	INSTALLATION OF THE TAILPIPE DEFLECTOR
	CESSNA 206	
	W/TAILPIPE	
	1242013-1-02-2	
	INSTALLED	
		11-26-85
		DWG NO
		SHEET 1 OF 2
		3238 I